

Replacement of the wheel



1. Remove the little cap.



2. Remove the aranlock and the washer.



3. Remove the hubcap.



4. Remove the wheel and replace with a new one. Re-assemble in reverse order.

Replacement of the button switch




1. Unscrew the 2 screws and remove the accelerator rubber.



2. Remove the accelerator button.



3. Remove the button switch.

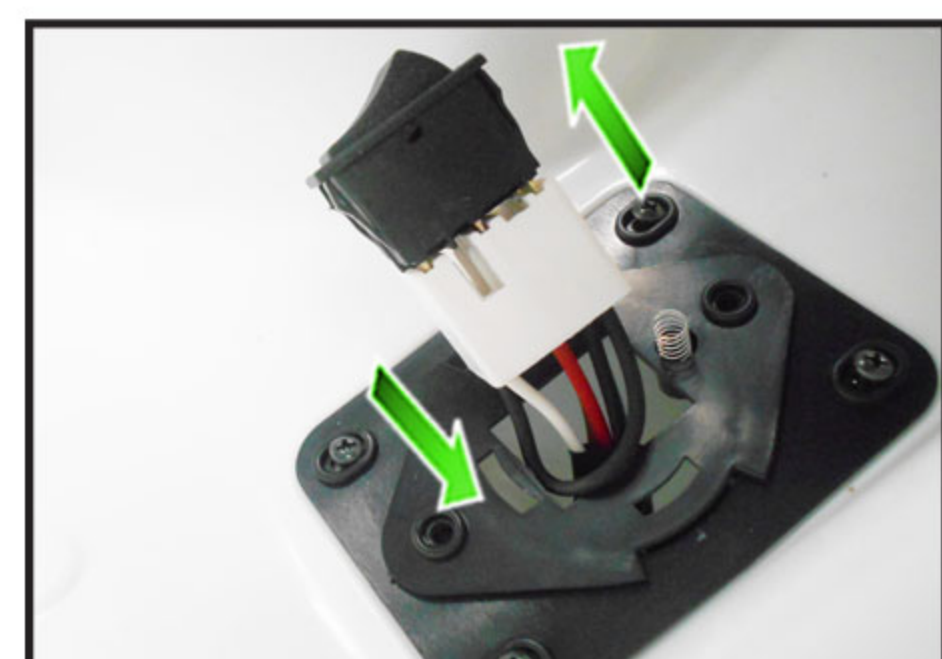

4. Disconnect the wires and replace it with a new one. Re-assemble in reverse order.

Note: Pay attention on connecting the button switch and the wires in the correct way.

Replacement of the mechanism



1. Remove the little cap.




2. Remove the aranlock and the washer.




3. Remove the hubcap.




4. Remove the wheel and replace with a new one. Re-assemble in reverse order.

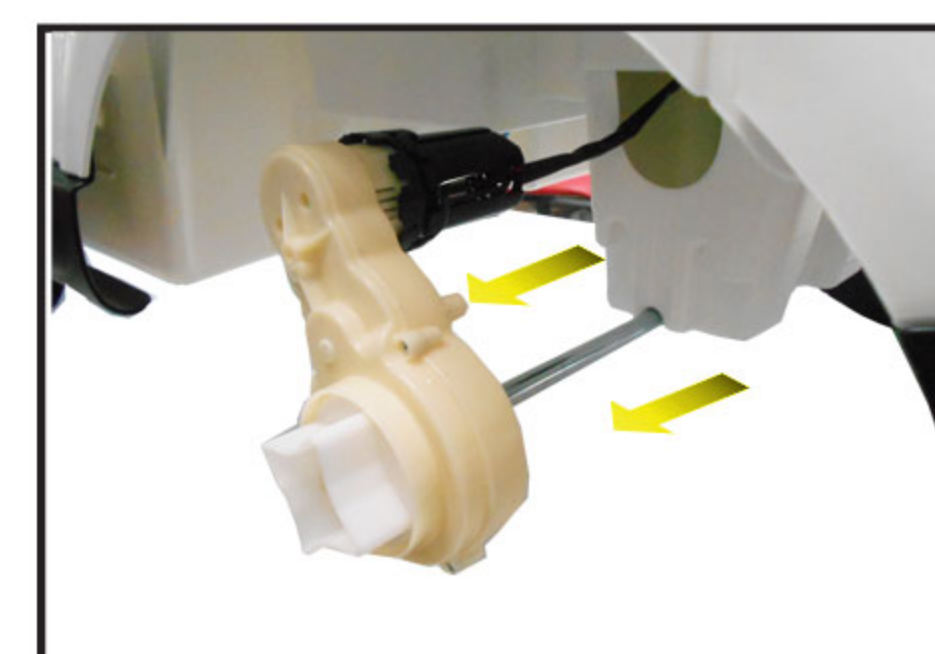


5. Pull out the axle and remove the mechanism.

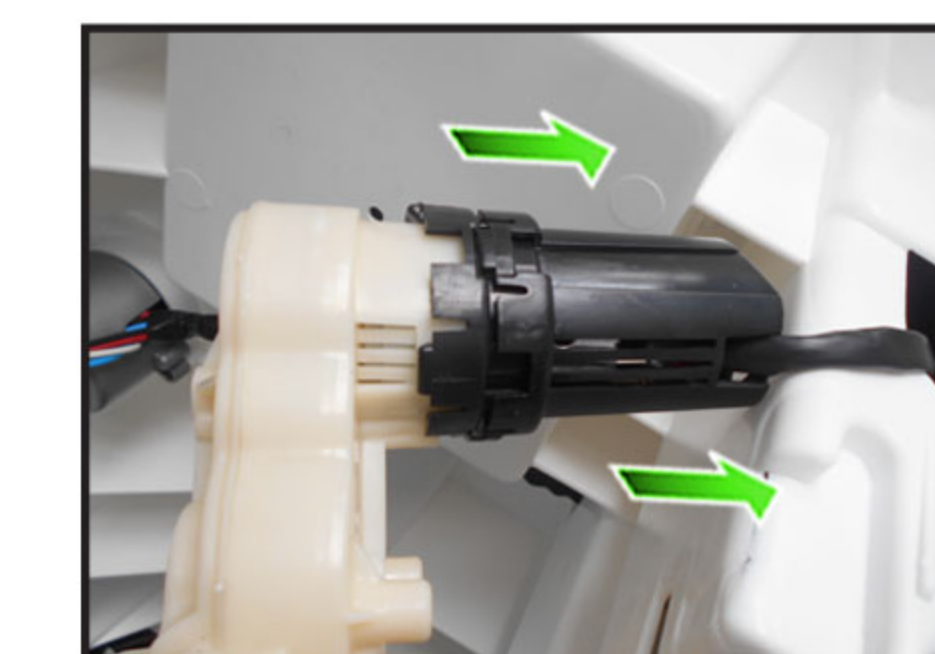

6. Remove the black cover of the mechanism.

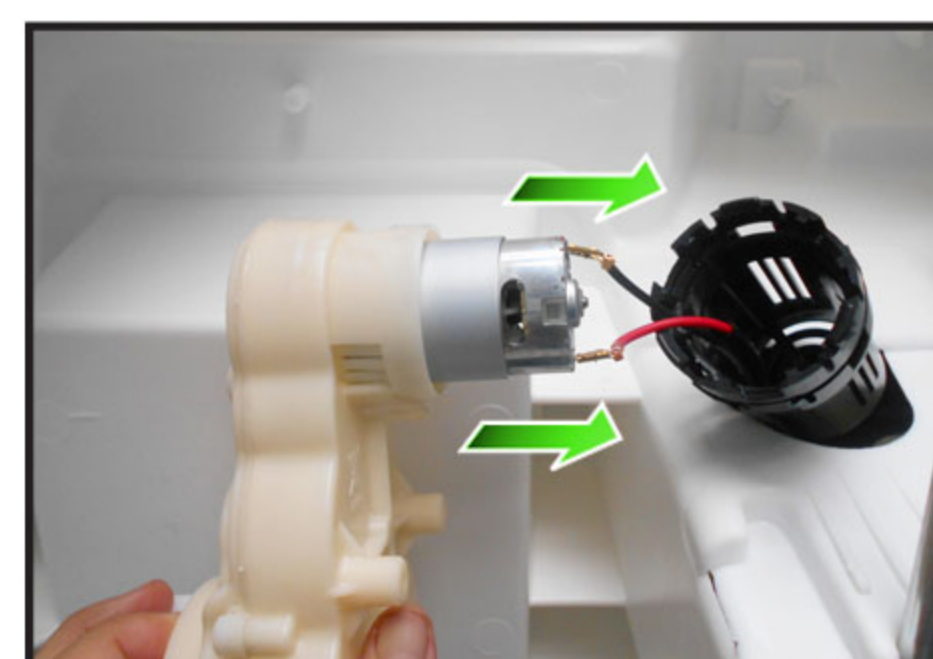

7. Disconnect the wires of the mechanism to replace it with a new one. Re-assemble in reverse order.

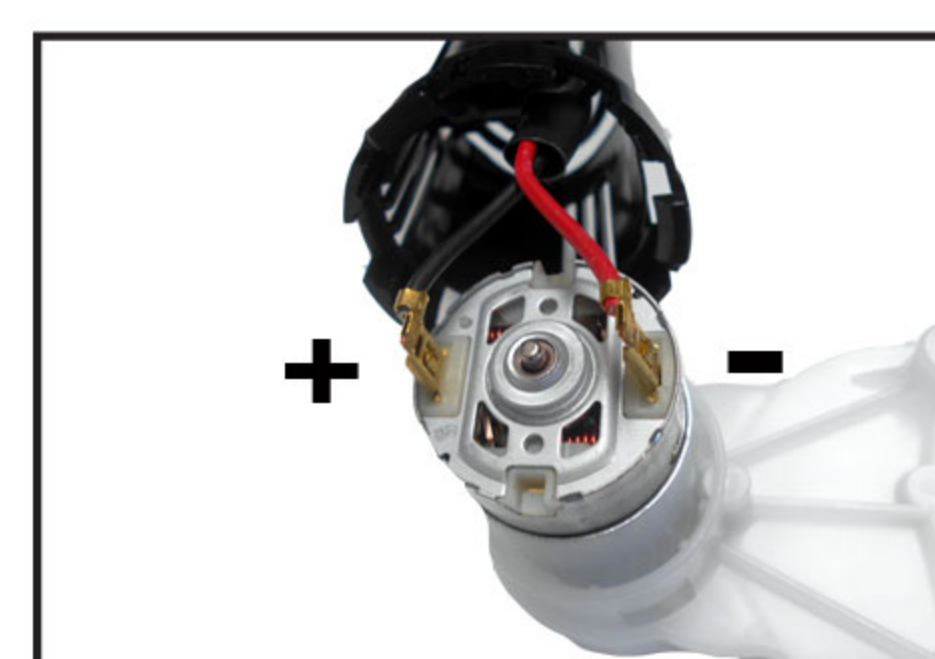

Note: Connect the wires in same polarity order of the previous mechanism.